

R/W	ADR	HEXADR	NAME	DESCRIPTION	OS
read/write	732	\$02DC	HELPPFG	Help key register	XL/XE

The Help-Key is read from [KBCODE](#) and stored in HELPPFG. There is no normal action when HELP is pressed. The programmer has to check HELPPFG or KBCODE.

### Bits#

Bit	Function
0	HELP
4	HELP
6	SHIFT
7	CTRL

### Values#

Hex	Dec	Explanation
\$00	0	HELP Flag cleared
\$11	17	HELP key pressed
\$51	81	SHIFT HELP pressed
\$91	145	CTRL HELP pressed

see also: [Keyboard topics Console Keys](#)