

<b>ADR</b>	<b>HEXADR</b>	<b>NAME</b>	<b>Description</b>	<b>OS</b>
6	\$0006	TRAMSZ	Temporary Register for RAM size	both

Temporary Register for RAM size; used during powerup sequence to test RAM availability. This value is then moved to [RAMTOP](#), location 106 (\$6A). Reads one when the BASIC or the A (left) cartridge is plugged in.

see also: [RAMTOP](#), [MEMTOP](#)